


POSIES SUPER SLIDE SPRINGS AND HOT ROD PARTS

219 N. Duke Street Hummelstown, PA 17036
Phone 717.566.3340 Fax 717.566.5440

1932 FORD REAR SUPERSLIDE SPRING KIT

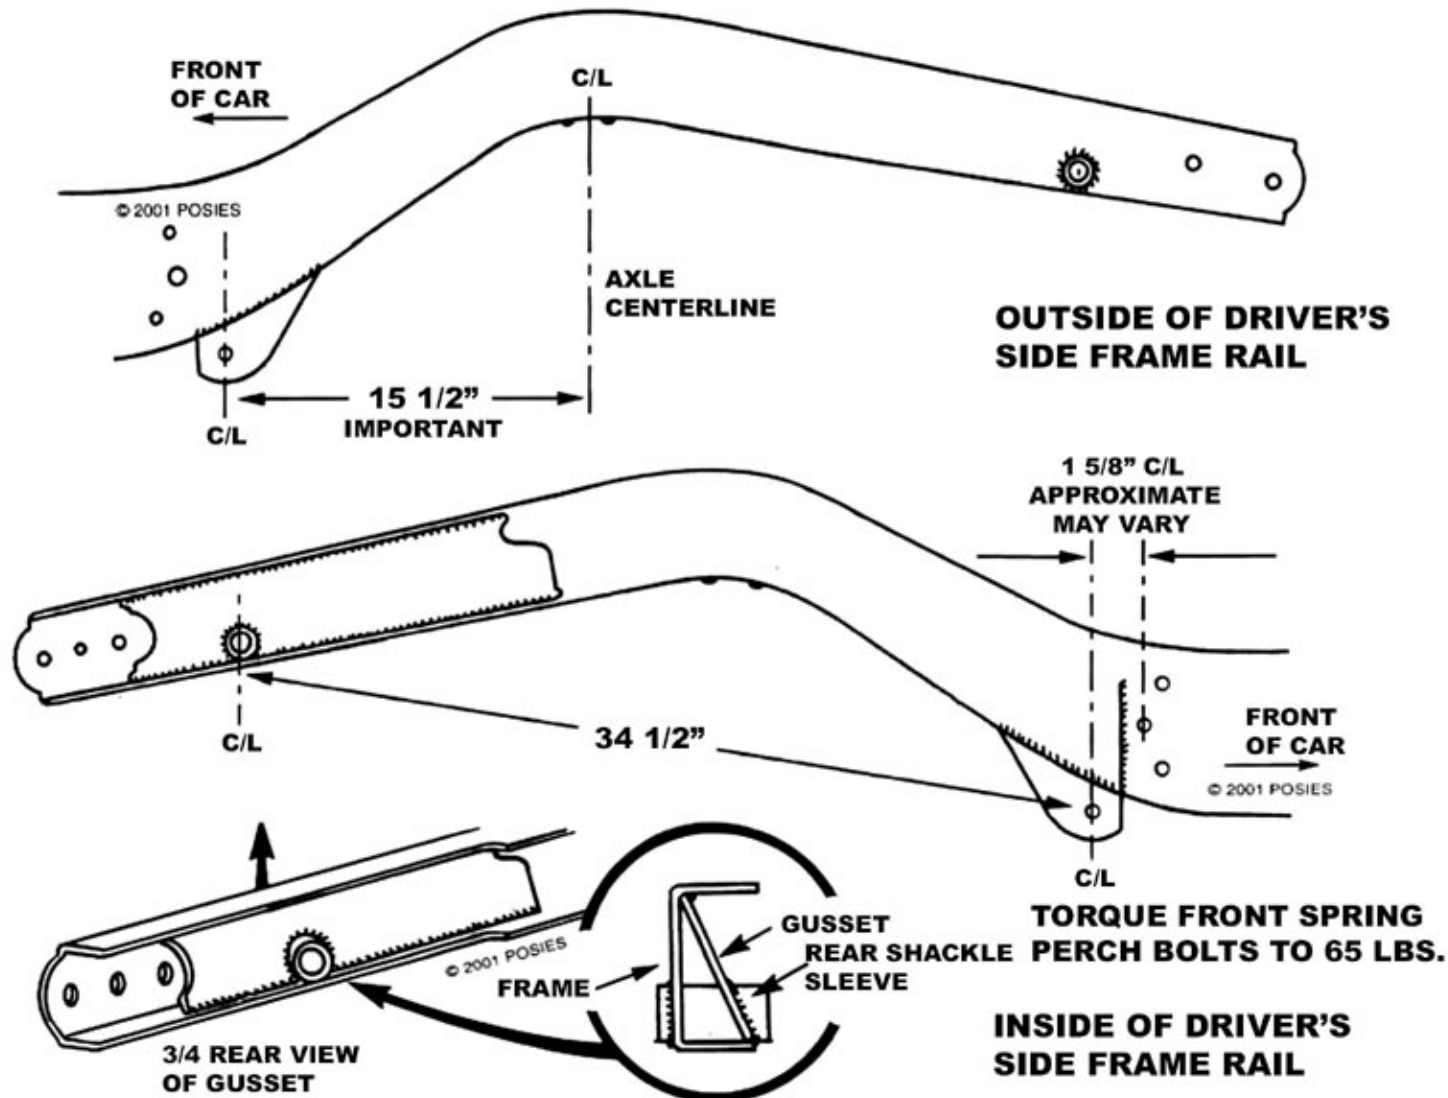

NOTE:

- MAKE SURE THAT YOUR FRAME IS LEVEL AND SQUARE
- THE MOUNTING BRACKETS MUST BE FULLY WELDED BEFORE FINAL INSTALLATION

KIT INCLUDES:

- | | |
|------------------------------|------------------------|
| (2) FRONT SPRING PERCHES | (2) STEEL SLEEVES |
| (2) SPRING MOUNTING HARDWARE | (2) SHACKLES |
| (2) AXLE SADDLES | (2) LOWER SHOCK MOUNTS |
| (4) U-BOLTS | (2) SUPERSLIDE SPRINGS |
| (2) U-BOLT PLATES | |
| (2) FRAME HORN GUSSETS | |

IMPORTANT:

MAKE SURE THAT YOU TIGHTEN THE SHACKLE NUTS SO THAT THE LAST THREAD IS PAST THE NUT. YOUR SHACKLE BUSHINGS WILL THEN LAST MANY MILES AND WORK CORRECTLY. OVER TIGHTENING OF THE SHACKLE NUTS AND FRAME MOUNT BOLT MAY RESULT IN A COMPROMISED RIDE QUALITY.

