


POSIES SUPER SLIDE SPRINGS AND HOT ROD PARTS


219 N. Duke Street Hummelstown, PA 17036
Phone 717.566.3340 Fax 717.566.5440

1933-34 FORD REAR SUPERSLIDE SPRING KIT

OUTSIDE VIEW

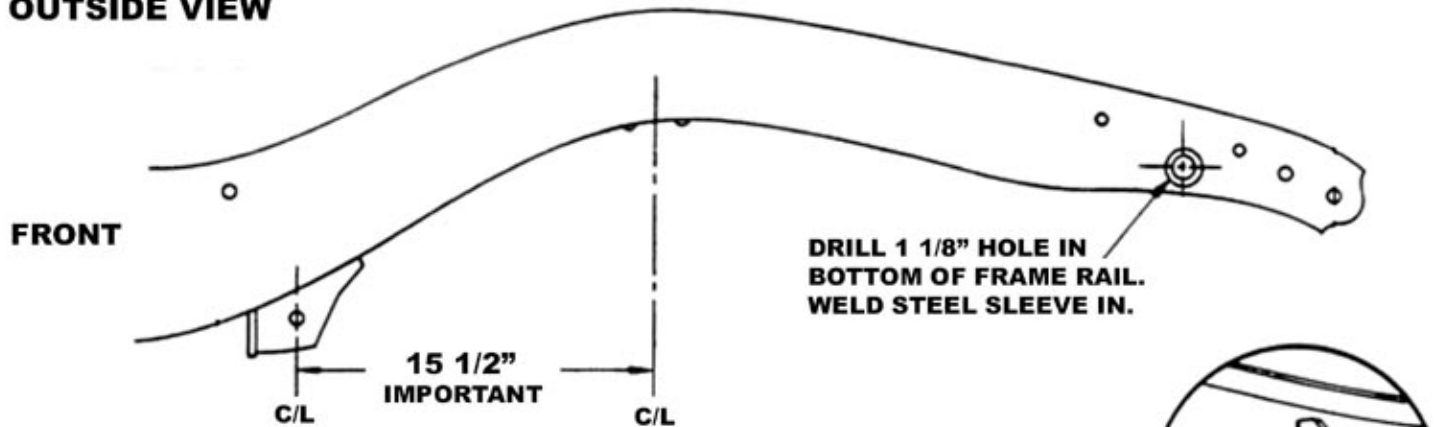

INSIDE VIEW

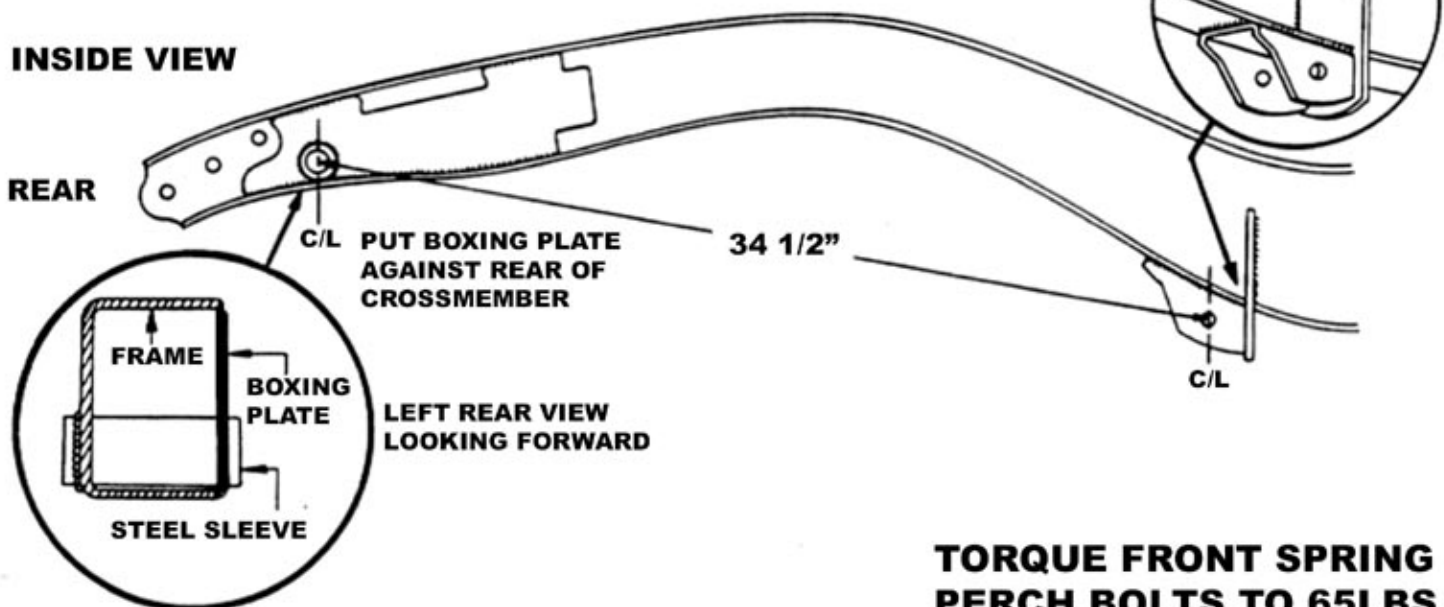

NOTE:

- MAKE SURE THAT THE FRAME IS LEVEL AND SQUARE
- THE MOUNTING BRACKETS MUST BE FULLY WELDED BEFORE FINAL INSTALLATION

KIT INCLUDES:

- | | |
|--------------------------|------------------------|
| (2) FRONT SPRING PERCHES | (2) BOXING PLATES |
| (2) BOLTS & LOCK NUTS | (2) SHACKLES |
| (2) AXLE SADDLES | (2) LOWER SHOCK MOUNTS |
| (4) U-BOLTS | (2) SUPERSLIDE SPRINGS |
| (2) U-BOLT PLATES | |
| (2) STEEL SLEEVES | |

IMPORTANT:

MAKE SURE THAT YOU TIGHTEN THE SHACKLE NUTS SO THAT THE LAST THREAD IS PAST THE NUT. YOUR SHACKLE BUSHINGS WILL THEN LAST MANY MILES AND WORK CORRECTLY. OVER TIGHTENING OF THE SHACKLE NUTS AND FRAME MOUNT BOLT MAY RESULT IN A COMPROMISED RIDE QUALITY.

