
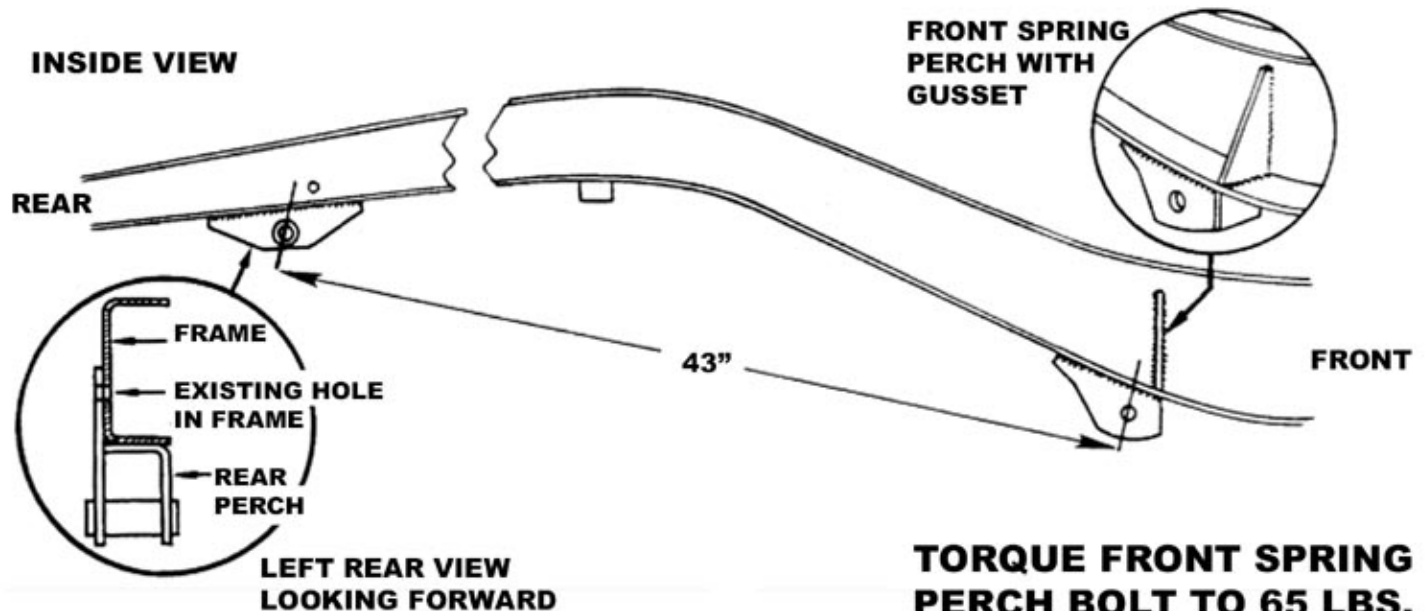


POSIES SUPER SLIDE SPRINGS AND HOT ROD PARTS

219 N. Duke Street Hummelstown, PA 17036
Phone 717.566.3340 Fax 717.566.5440

1941-48 FORD REAR SPRING KIT

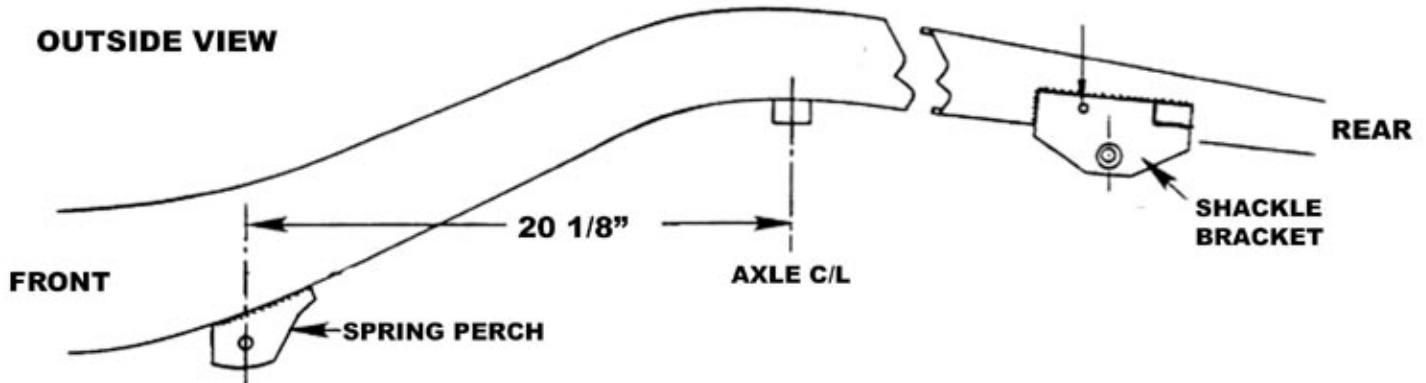

**TORQUE FRONT SPRING
PERCH BOLT TO 65 LBS.**

NOTE:

- MAKE SURE THAT THE FRAME IS LEVEL AND SQUARE
- THE MOUNTING BRACKETS MUST BE FULLY WELDED BEFORE FINAL INSTALLATION

KIT INCLUDES:

- (2) FRONT SPRING PERCHES
- (2) SPRING EYE BOLTS & LOCK NUTS
- (2) AXLE SADDLES
- (4) U-BOLTS
- (2) U-BOLT PLATES

- (2) REAR BRACKETS WITH STEEL SLEEVES
- (2) SHACKLES
- (2) LOWER SHOCK MOUNTS
- (2) SUPERSLIDE SPRINGS

IMPORTANT:

MAKE SURE THAT YOU TIGHTEN THE SHACKLE NUTS SO THAT THE LAST THREAD IS PAST THE NUT. YOUR SHACKLE BUSHINGS WILL THEN LAST MANY MILES AND WORK CORRECTLY. OVER TIGHTENING OF THE SHACKLE NUTS AND FRAME MOUNT BOLT MAY RESULT IN A COMPROMISED RIDE QUALITY.

